



Rota Yokogawa - Flowcenter of Excellence

Installation Procedure for the “Flow Configurator 3.6”:

SYSTEM REQUIREMENTS:

- Microsoft® .NET Framework 3.5
- Adobe® Reader®
- Min. 256 MB RAM; 512MB recommended
- Approx. 60MB free hard disc space

Supported Operating Systems:

Windows XP; Windows Vista (all Versions); Windows 7

Installation:

1. Be sure you have appropriate permissions to install software! In case of trouble or missing permissions ask your administrator to perform the installation according the following steps. **Please remove all former sizing versions before you start this installation!**
2. Make sure you have the latest service pack and critical updates for the version of Windows® that you are running. To find recent security updates, visit [Windows® Update](#) .
If you have already installed the Microsoft® .NET Framework 3.5-package You can skip item 3 and continue the installation from item 4.
3. Download the [.NET Framework Version 3.5](#) from the Microsoft® Download site and install the package following the instructions given by Microsoft. Choose the appropriate language of the package corresponding to the language of your Windows® version.
4. You can either download the Flow Configurator Version 3.6 directly from the FCP or order a CD from fcp.info@de.yokogawa.com. After you have downloaded the “Setup.msi”-file, please start it and follow the instructions given.
5. Every user of the installed sizing program must have **modify permissions** for the chosen install path of step 4.
6. You can start the program by double-clicking the icon “Sizing” on the desktop.
7. In order to remove the FlowConfigurator simply start “Setup.msi” again and select “Remove”.
8. For printing to pdf-files an appropriate Tool is required. A freeware pdf-converter is available at <http://shbox.de/fpxp.htm>