

SIEMENS

SITRANS L

Ultrasonic transmitters SITRANS LU180

Operating Instructions

<u>Introduction</u>	1
<u>Description</u>	2
<u>Installing and mounting</u>	3
<u>Connecting</u>	4
<u>Commissioning</u>	5
<u>Operating</u>	6
<u>Troubleshooting</u>	7
<u>Technical specifications</u>	8
<u>Product documentation and Support</u>	A
<u>Appendix</u>	B

7ML5202 (SITRANS LU180)

09/2021

A5E37100674-AB

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 DANGER
indicates that death or severe personal injury will result if proper precautions are not taken.
 WARNING
indicates that death or severe personal injury may result if proper precautions are not taken.
 CAUTION
indicates that minor personal injury can result if proper precautions are not taken.
NOTICE
indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

 WARNING
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Table of contents

1	Introduction	5
2	Description	6
3	Installing and mounting	7
3.1	Environmental	7
3.2	Location	7
3.3	Threaded	8
3.4	Flange adapter (optional).....	9
3.5	4" Sanitary	10
3.6	LU180 with FMS200 mounting bracket	13
4	Connecting	14
4.1	Connecting the LU180	14
4.1.1	Cable entry	14
4.1.2	System diagram	15
4.1.3	Wiring connection	15
4.2	Instructions specific to hazardous area installations	16
4.3	Nameplates for hazardous area installations.....	17
5	Commissioning	19
5.1	Start up	19
5.2	Calibration.....	20
5.3	Calibration: reference method.....	20
5.4	4 mA calibration	21
5.5	20 mA calibration	21
5.6	Operation status	22
6	Operating	23
6.1	Adjustments	23
6.2	Calibration, scrolling method	24
6.3	4 mA calibration	24
6.4	20 mA calibration	25
6.5	Blanking	25
6.6	Adjusting the blanking value.....	26
6.7	Speed of response	27
6.8	Adjusting the speed of response	28

6.9	Fail-safe.....	28
6.10	Adjusting the fail-safe setting.....	29
6.11	Fail-safe timer.....	29
6.12	Adjusting the fail-safe timer	29
6.13	Units	30
6.14	Adjusting the units	30
7	Troubleshooting	31
8	Technical specifications.....	32
8.1	Power.....	32
8.2	Performance.....	32
8.3	Interface.....	32
8.4	Outputs.....	33
8.5	Construction.....	33
8.6	Operating conditions	33
8.7	Approvals	34
A	Product documentation and Support	35
A.1	Product documentation	35
A.2	Technical support	36
B	Appendix	37
B.1	Measurement interval.....	37
	Index.....	38

Introduction

Note**For industrial use only**

This product is intended for use in industrial areas. Operation of this equipment in a residential area may cause interference to several frequency based communications.

Note**Unit repair**

All changes and repairs must be done by qualified personnel, and applicable safety regulations must be followed. Please note the following:

- The user is responsible for all changes and repairs made to the device.
 - All new components must be provided by Siemens.
 - Restrict repair to faulty components only.
 - Do not re-use faulty components.
-

Description

The SITRANS LU180 is an ultrasonic level monitor combining sensor and electronics in a single package. It is designed to measure liquid levels in open or closed vessels. The process part (sensor) is PVDF, allowing the SITRANS LU180 to be used in a wide variety of industries, especially food and chemical.

The sensor houses the ultrasonic transducer and temperature sensing element. The SITRANS LU180 emits a series of ultrasonic pulses from the transducer. Each pulse is reflected as an echo from the material and sensed by the transducer. The echo is processed by the SITRANS LU180 using Siemens' proven 'Sonic Intelligence' techniques. Filtering is applied to help discriminate between the true echo from the material, and false echoes from acoustical and electrical noises and agitator blades in motion. The time for the pulse to travel to the material and back is temperature compensated and then converted into distance for the mA output.

Installing and mounting

3.1 Environmental



The SITRANS LU180 should be mounted in an area that is within the temperature range specified, and that is suitable to the housing rating and materials of construction.

It is advisable to keep the device away from high voltage or current runs, contactors and SCR control drives.

3.2 Location

Locate the SITRANS LU180 so that it will have a clear sound path that is perpendicular to the liquid surface.

The SITRANS LU180 sound path should not intersect the fill path, rough walls, seams, rungs, etc.

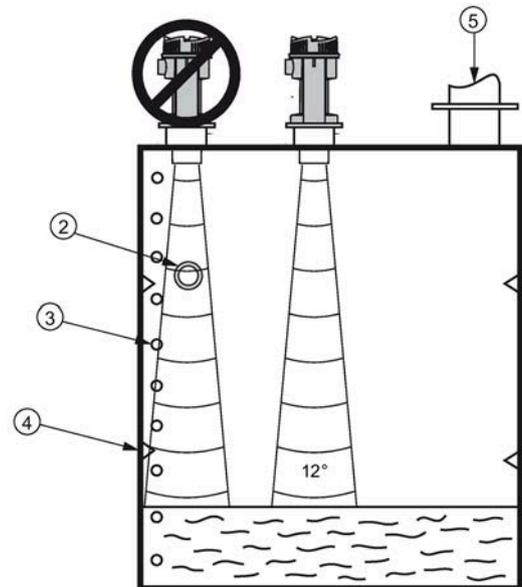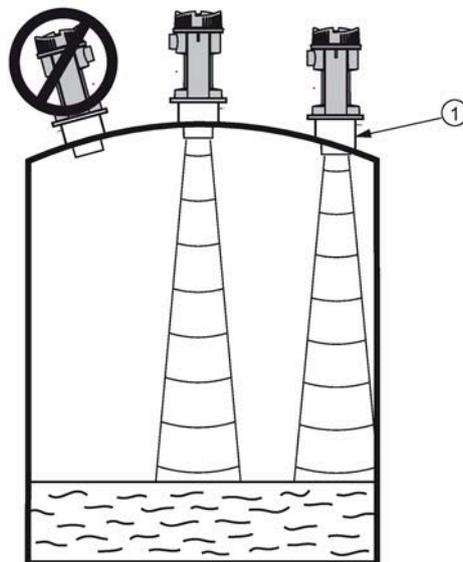


- ① Sanitary ferrule
- ② Pipe
- ③ Rungs

- ④ Seams
- ⑤ Fill

Note

Mount the SITRANS LU180 so that the face of the sensor is at least 25 cm above the highest anticipated level.

3.3 Threaded

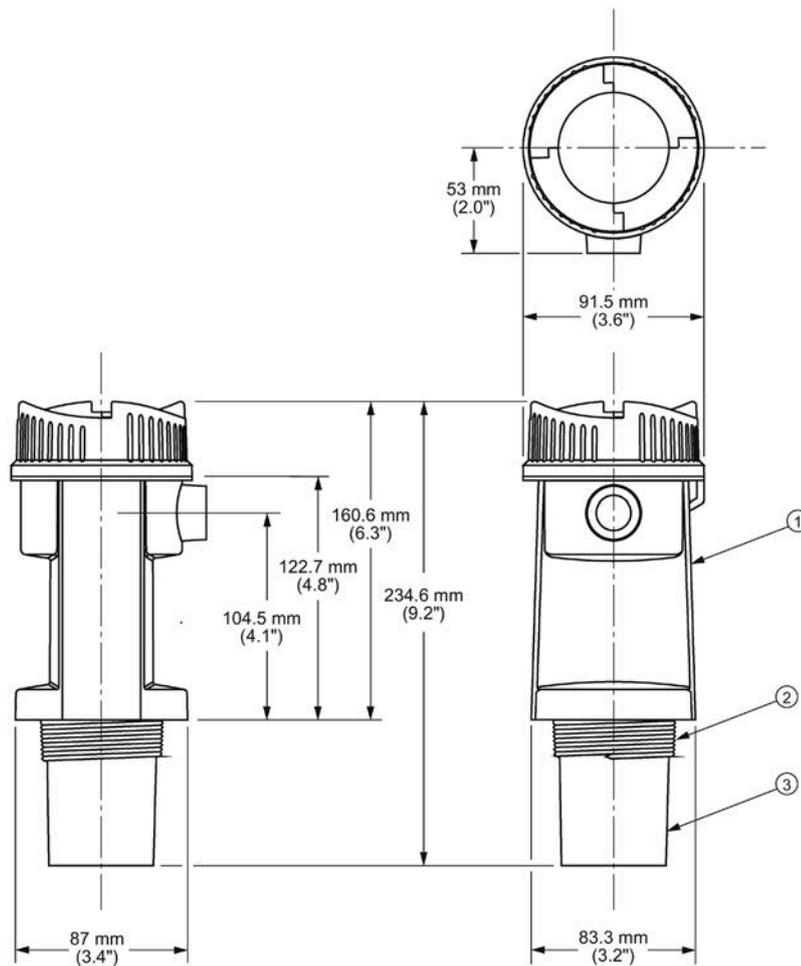

- ① Electronics
- ② Mounting thread
- ③ Sensor

The SITRANS LU180 is available in three thread types:



1. 2" NPT ((Taper), ANSI/ASME B1.20.1)
2. R 2" ((BSPT), EN 10226)
3. G 2" ((BSPP), EN ISO 228-1)

Note

Before inserting the SITRANS LU180 into its mounting hole, ensure that the threads are of the same type to avoid damaging the device.

3.4 Flange adapter (optional)

The SITRANS LU180 can be fitted with the optional 75 mm (3") flange adapter for mating to 3" ANSI, DIN 65PN10 and JIS 10K3B flanges.

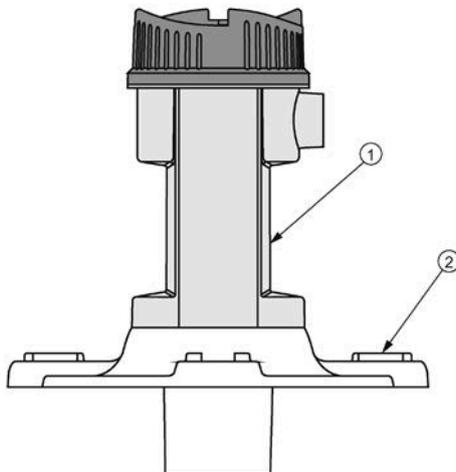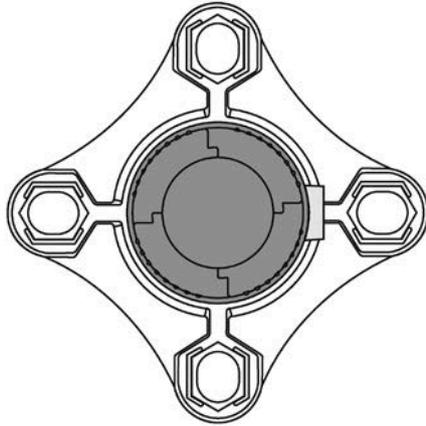


- ① SITRANS LU180
- ② Optional flange adapter (2" NPT - 7ML1830-1BT, 2" BSPT - 7ML1830-1BU)

3.5 4" Sanitary


Note

- The sanitary version is suitable for chemical clean-in-place applications to 60 °C (140 °F) only. Ensure your cleaning chemicals are compatible with PVDF.
-

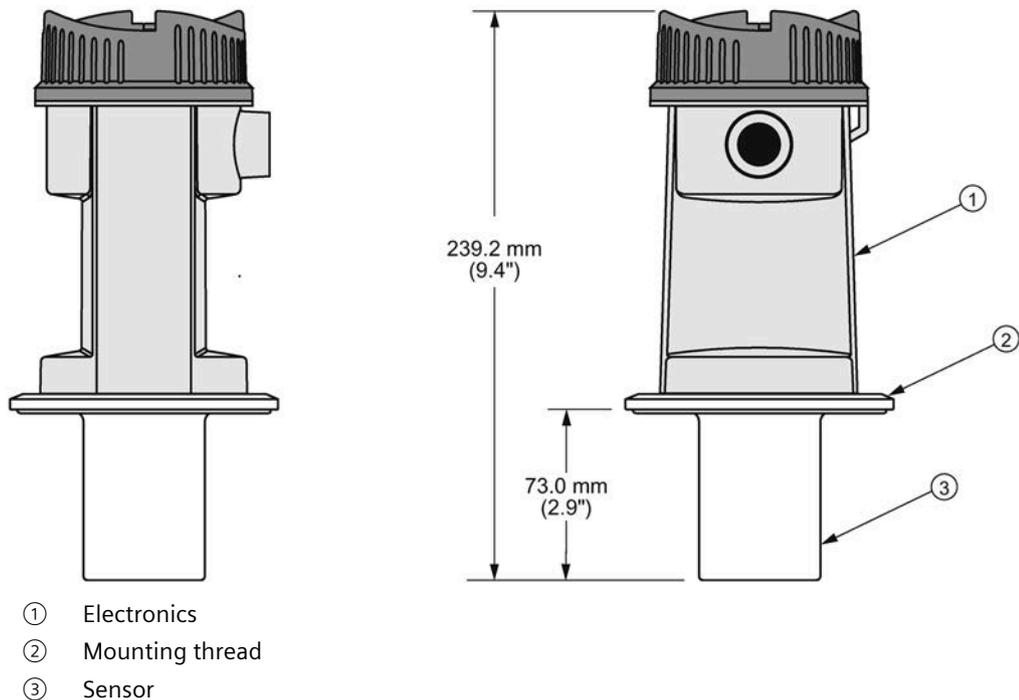


Mounting the sanitary version

1. Mount the SITRANS LU180 onto the top of the tank's sanitary ferrule.
2. Secure mating by surrounding the joint with the clamp.
3. Tighten adjusting wing nut.

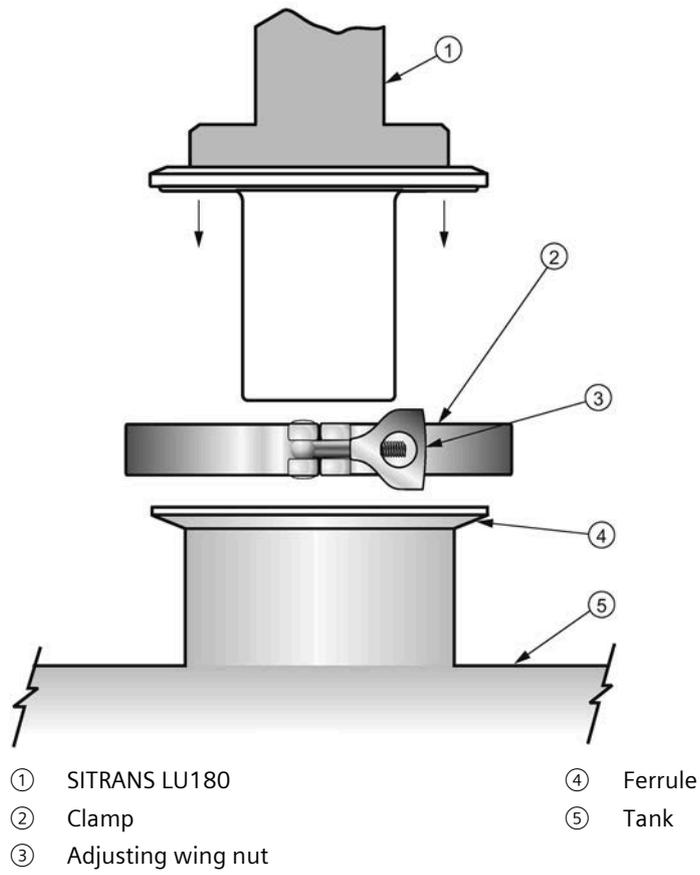


4" Sanitary ferrule

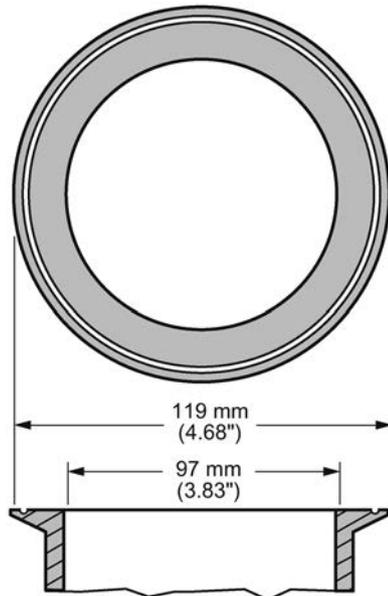

Note

The inside of sanitary ferrule must be smooth, and free of burrs, seams or ridges.

3.6 LU180 with FMS200 mounting bracket

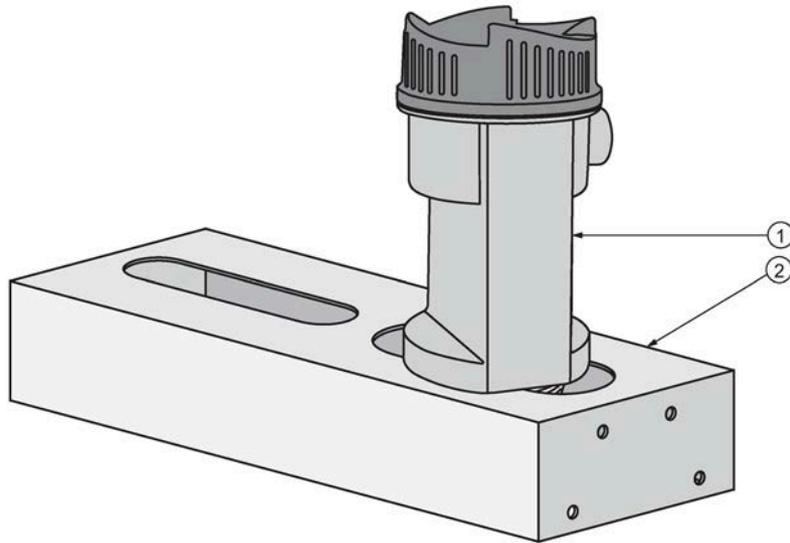


- ① LU180
- ② FMS200 mounting bracket (7ML1830-1BK) with 7ML1830-1DT (Locknut, 2" NPT) or 7ML1830-1DQ (Locknut, 2" BSPT).

Connecting

4.1 Connecting the LU180

4.1.1 Cable entry

1. Loosen lid and remove it.
2. Install cable gland or conduit.
3. Insert wires through gland or conduit and up through cable guide.
4. Connect wiring.
5. Replace lid and tighten it.

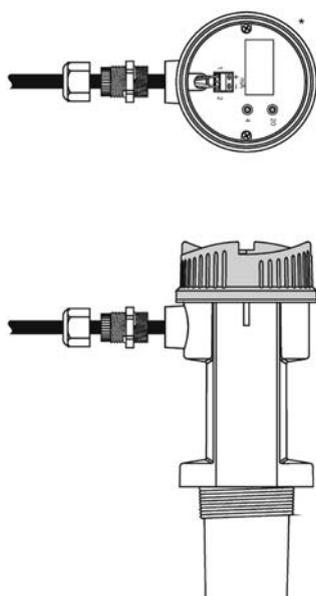


* Lid removed for clarity


Note

- To maintain IP and NEMA ratings, tighten the lid between 4 to 4.5 Nm.
 - Ensure the cable gland is screwed in to the enclosure tightly and the cable is within the specified clamping range (6.5 to 12 mm).
 - User supplied cable glands must meet IP68/NEMA 6 ratings and be installed according to the manufacturer's instructions.
-

4.1.2 System diagram

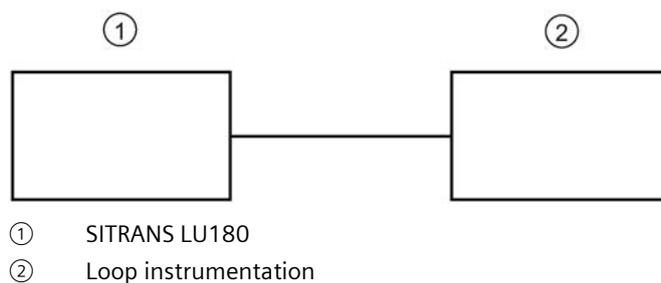

4.1.3 Wiring connection

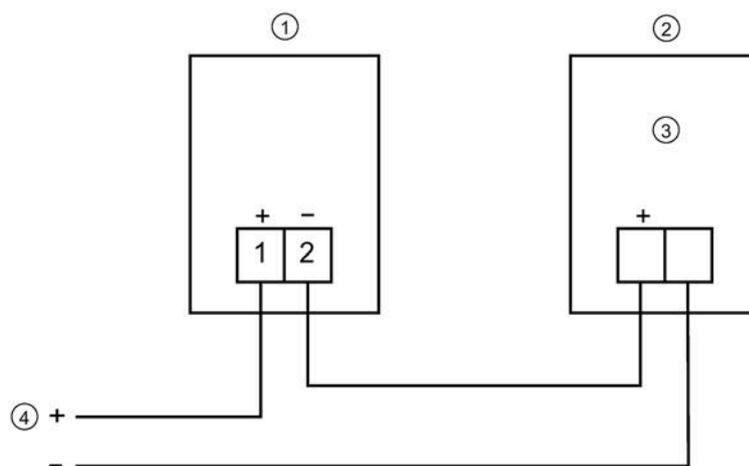

$$R \text{ max} = \frac{V \text{ supply} - 12 \text{ V}}{20 \text{ mA}}$$

Note

Power supply is reverse polarity protected.

4.2 Instructions specific to hazardous area installations

Instructions specific to hazardous area installations (in accordance with IEC 60079-0:2011 clause 30)

The following instructions relevant to safe use in a hazardous area apply to equipment covered by certificate numbers SIRA 15ATEX2334X, CSAE 21UKEX2099X and IECEx SIR 15.0118X.

1. The certification marking is as follows:

Certificate number:	IECEX SIR 15.0118X	Sira 15ATEX2334X	CSAE 21UKEX2099X
Certification code:	Ex ia IIC T4 Ga	Ex ia IIC T4 Ga	Ex ia IIC T4 Ga
Other marking:		 II 1G	 CE 2813  UKCA 0518

2. The equipment may be used in zones 0, 1 & 2 with flammable gases and vapours with apparatus groups IIA, IIB & IIC and with temperature classes T4.
3. The equipment is only certified for use in ambient temperatures in the range -40°C to +60°C and should not be used outside this range.
4. Installation shall be carried out in accordance with the applicable code of practice by suitably-trained personnel.
5. There are no special checking or maintenance conditions other than a periodic check.
6. With regard to explosion safety, it is not necessary to check for correct operation.
7. The equipment contains no user-replaceable parts and is not intended to be repaired by the user. Repair of the equipment is to be carried out by the manufacturer, or their approved agents, in accordance with the applicable code of practice.
8. Repair of this equipment shall be carried out in accordance with the applicable code of practice.
9. If the equipment is likely to come into contact with aggressive substances, e.g. acidic liquids or gases that may attack metals or solvents that may affect polymeric materials, then it is the responsibility of the user to take suitable precautions that prevent it from being adversely affected thus ensuring that the type of protection is not compromised.
10. The certificate number has an 'X' suffix which indicates that special conditions of installation and use apply. Those installing or inspecting this equipment must have access to the contents of the certificate or these instructions. The conditions listed in the certificate are reproduced below:

- Under certain extreme circumstances, the non-metallic parts incorporated in the enclosure of this equipment may generate an ignition-capable level of electrostatic charge. Therefore the equipment shall not be installed in a location where the external conditions are conducive to the build-up of electrostatic charge on such surfaces.
- In addition, the equipment shall only be cleaned with a damp cloth. This is particularly important if the equipment is installed in a zone 0 location.

4.3 Nameplates for hazardous area installations

Note

Device-specific approvals

Always refer to nameplates on the device for device-specific approvals.

ATEX and UKEX certificates on nameplate

The ATEX and UKEX certificates listed on the nameplate can be downloaded from the LU180 product page on our website <http://www.siemens.com/SITRANSLU180>.

Go to **Support > Approvals > Certificates**.

The IECEX certificate listed on the nameplate can be viewed on the IECEX website:

1. Go to <http://iecex.iec.ch/>
2. Click on **Certified Equipment**
3. Enter the certificate number **IECEX 15.0118X**

4.3 Nameplates for hazardous area installations

INTRINSICALLY SAFE / SÉCURITÉ INTRINSÈQUE Ex ia
 Class I, II, III, Div. 1
 Groups A,B,C,D,E,F,G T4
 Per Dwg.: A5E36360958
 V max = 30 V 
 I max = 200 mA, Pj = 0.8 W
 Ci = 0, Li = 0

 2813 

 0518 

 MSIP-REM-S49
 SITRANSLU180

 GYJ21.1187X

 II 1 G
 Ex ia IIC T4 Ga
 Sira 15ATEX2334X
 IECEx SIR 15.0118X
 CSAE 21UKEX2099X


WARNING: POSSIBLE ELECTROSTATIC RISK DO NOT RUB
 OR CLEAN ON SITE
 AVERTISSEMENT : POSSIBILITÉ DE RISQUE ÉLECTROSTATIQUE,
 NE PAS FROTTER OU NETTOYER SUR SITE

①

① ATEX and UKEX certificates

SIEMENS

SITRANS LU180 Ultrasonic Level Transmitter
 2- Wire Loop Powered
 7ML5202-xxxx-xxx
 Serial No.: YSN/E6xxxxxx
 Power Rating: 12 – 30 V , 0.1 A Max
 Operating Temp: – 40°C to 60°C
 Enclosure: Type/NEMA 6, IP68

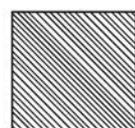BOX 1

BOX 2

BOX 1 MANUFACTURING LOCATION

1	Siemens Milltronics Process Instruments, Peterborough
2	Siemens Milltronics Process Instruments, Peterborough Product


BOX 2 MANUFACTURING LOCATION

1	Assembled in Canada with domestic and imported parts
2	Assembled in Dalian, China 116023 by Siemens Sensors and Communication Ltd.

Commissioning

5.1 Start up

1. With the SITRANS LU180 correctly installed (or aimed at a wall 0.25 to 5 m away), apply power.
The device starts up, displaying the following:

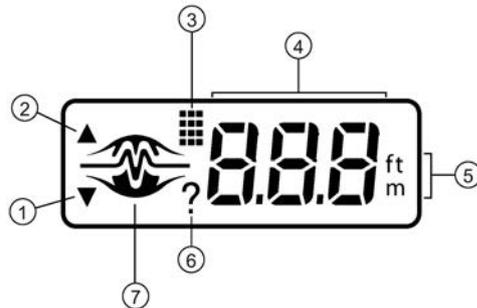

- | | |
|----------------|--------------------|
| ① '4' key | ⑤ Units |
| ② '20' key | ⑥ LOE/fault |
| ③ Program mode | ⑦ Operation status |
| ④ Alphanumeric | |


2. It then defaults to the **Run mode**, which is the measurement reading of the distance from the transducer face to the material level in the units indicated as shown:



3. If the default display differs from that shown, refer to SITRANS LU180.

5.2 Calibration

The calibration of the mA output may be done such that its span will be either proportional or inversely proportional to the material level.

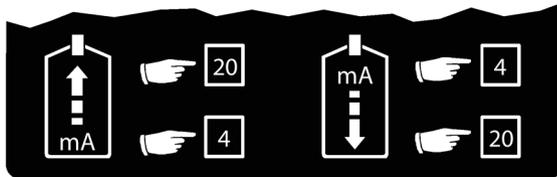

Note

The 4 and 20 mA levels may be calibrated in any order.

Proportional span	Inversely proportional span
high level = 20 mA	high level = 4 mA
low level = 4 mA	low level = 20 mA

5.3 Calibration: reference method

1. Adjust the material level (or target) to the desired distance from the sensor face.
2. Press the "4" or "20" key (as appropriate) to view the stored distance associated with that mA output value.
3. Press the key a second time to set the new distance reference.
4. After viewing or calibrating, the unit operation automatically reverts to the Run mode (6 sec). The calibration value is referenced from the face of SITRANS LU180 sensor, in the units displayed.

5.4 4 mA calibration

Press "4"



Press "4" again



4 mA calibration

calibration invalid if



new 4 mA calibration



retry

5.5 20 mA calibration

Press "20"



Press "20" again



20 mA calibration

calibration invalid if



new 20 mA calibration




retry

Note

Calibration bypasses the measurement response rate.

5.6 Operation status

The graphic portion of the display gives the user a visual indication of the SITRANS LU180 operating status. During commissioning, viewing the graphic can assist the user in properly locating and installing the unit to achieve optimum performance.

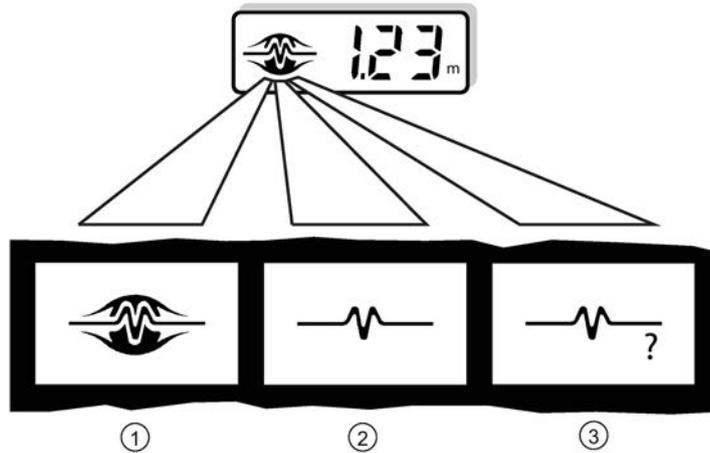

- ① GOOD
- ② WAITING
- ③ LOE / FAULT


The graphic will change from full to partial to indicate operation status. After the 'Waiting' period, the '?' icon will appear for an 'LOE / FAULT' indication. When a valid echo is again received, a 'Good' indication will resume. Refer to Troubleshooting (Page 31).

Operating

6.1 Adjustments

There are several operating adjustments that can be made to the SITRANS LU180.

To access the operating adjustments, simultaneously press the "4" and "20" keys until the desired adjustment is obtained. A viewing sequence of the stored value is automatically initiated. During this time the value can be changed by pressing either the "4" or "20" key. After viewing or changing, operation automatically reverts to the Run mode (6 secs).

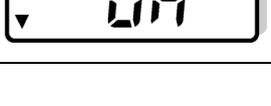Adjustment	Display
4 mA calibration (Page 24), scrolling	
20 mA calibration (Page 25), scrolling	
Blanking (Page 25)	
Speed of response (Page 27)	
Fail-safe (Page 28)	
Fail-safe timer (Page 29)	
Units (Page 30)	

Note

Calibration bypasses the measurement response rate.

6.2 Calibration, scrolling method

The 4 and 20 mA calibration values can be selected where reference levels, either from the material in the vessel or from a target, cannot be provided. This method can also be used to trim the output levels obtained by the Calibration: reference method (Page 20)

To change the stored calibration value, obtain the 'c 4' or 'c 20' display. The calibration value may be increased by pressing the "20" key or decreased by pressing the "4" key. When the display has scrolled to the desired value, stop pressing the key. The display automatically reverts to the Run mode (6 secs).

Note

For faster scrolling, hold the key, and release it when the appropriate value is shown.

6.3 4 mA calibration



4 mA calibration initiated



view stored 4 mA calibration value
(i.e. 4.50 m)



press "20" to increase to new calibration value
(i.e. 4.60 m)



new calibration value

6.4 20 mA calibration



20 mA calibration initiated



view stored 20 mA calibration value
(i.e. 0.50 m)




press "4" to increase to new calibration value
(i.e. 0.45 m)



new calibration value

6.5 Blanking

Blanking is used to ignore the zone in front of the transducer where false echoes are at a level that interfere with the processing of the true echo. It is measured outward from the sensor face. The minimum recommended blanking value is 0.25 m (0.82 ft) but can be increased in order to extend the blanking.

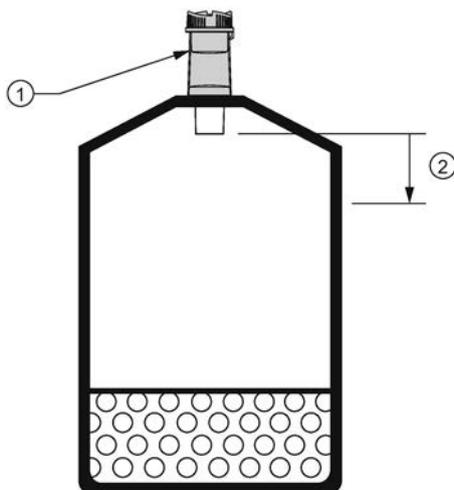

- ① SITRANS LU180
- ② Blanking

6.6 Adjusting the blanking value

To change the stored blanking value, go to the 'bL' display (as described in Adjustments (Page 23)), and proceed as follows:

1. Press the "20" key to increase the blanking value, or the "4" key to decrease it until the correct value is displayed.
2. Release the key. The display automatically returns to the Run mode (6 secs).



3 seconds Indicates that the device is now in blanking mode.



The stored blanking value is shown (for example 0.25 m)



Press "20" to increase blanking value (i.e. 0.36 m)



Press "4" to decrease the blanking value (i.e. 0.35 m)



6 seconds The new blanking value is shown.

6.7 Speed of response

The speed of response adjustment allows the user to collectively set a number of operating parameters.

- measurement response: is the limit to which the SITRANS LU180 will be able to keep up with rates of change. If the unit's measurement cannot keep up with the rate of level change, set the adjustment from '1' to '2'. If it still cannot keep up with the rate of level change, set the adjustment option to '3'. Avoid choosing an option that is too fast for your application.
- agitator discrimination: discriminates between agitator blades in motion, and the material (target) surface.
- filter: discriminates between false echoes from acoustical and electrical noise, and the material (target) surface.
- fail-safe timer: establishes the 'Waiting' period from the time a loss of echo or operating fault condition starts, until the fail-safe default is effected. Adjusting the speed of response will set the fail-safe timer to the default values in the chart. If a different response is required, adjust the 'FSt' option (Fail-safe (Page 28)).

SP	measurement response	agitator discrimination	filter	fail-safe timer
1*	1 m/min (3.3 ft/min)	on	on	10 minutes
2	5 m/min (16.4 ft/min)	on	on	3 minutes
3	immediate	off	off	3 minutes
4	0.03 m/min (0.1 ft/min)	on	on	10 minutes

* = factory setting

6.8 Adjusting the speed of response


To change the speed of response, go to the 'SP' display (as described in Adjustments (Page 23)), and proceed as follows:

1. Press the "20" key to scroll forward through the available values (1-2-3), and press the "4" key to scroll backwards.
2. Once you have reached the appropriate value, stop pressing the key. The display automatically returns to the Run mode (6 secs).



3
seconds


Indicates that the device is now in speed of response mode.

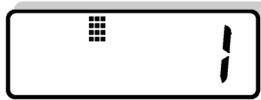

The current option is shown (i.e. 1 m/min)



Press "20" for option 2 (i.e. 5 m/min)

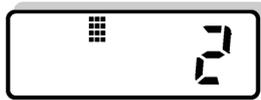

6
seconds

Option 2 has now been selected.

6.9 Fail-safe

In the event a loss of echo or fault condition exceeds the 'Waiting' period (see Speed of response (Page 27), or Fail-safe timer (Page 29)), the '?' icon appears and one of the following fail-safe defaults is immediately effected.

SP	default	mA ^p	mA ⁱ	reading
1	full	22	4	hold
2	empty	4	22	hold
3*	hold	hold	hold	hold

p = proportional span

i = inversely proportional span

* = factory setting

6.10 Adjusting the fail-safe setting

To change the fail-safe setting, go to the 'FLS' display (as described in Adjustments (Page 23)), and proceed as follows:

1. Press the "20" key to scroll forward through the available values (1-2-3), and press the "4" key to scroll backwards.
2. Once you have reached the appropriate value, stop pressing the key. The display automatically returns to the Run mode (6 secs).



3
seconds

Indicates that the device is now in fail-safe mode.



The current option is shown
(i.e. full)



Press "20" for option 2
(i.e. empty)



6
seconds

Option 2 has now been selected.

6.11 Fail-safe timer

The fail-safe timer allows the user to vary the 'waiting' period from the time a loss of echo or operating fault condition begins, until the fail-safe default is effected. The 'waiting' period is adjustable from 1 to 15 minutes, in 1 minute increments.

The fail-safe timer value will default to settings determined by the Speed of response (Page 27). If a different value is desired, the fail-safe timer should be adjusted *after* the speed of response is set.

6.12 Adjusting the fail-safe timer

To change the fail-safe setting, go to the 'FSt' display (as described in Adjustments (Page 23)), and proceed as follows:

1. Press the "20" key to increase the 'waiting' period, and press the "4" key to decrease it.
2. Once you have reached the appropriate value, stop pressing the key. The display automatically returns to the Run mode (6 secs).

6.13 Units

The units of the measurement reading can be selected as follows:

1 = metres, m (factory setting)

2 = feet, ft

The selected units are also applicable to the 'Blanking' adjustment.

6.14 Adjusting the units

To change the units, go to the 'Un' display (as described in Adjustments (Page 23)), and proceed as follows:

1. Press the "20" key to scroll forward through the available options (1-2), and press the "4" key to scroll backwards.
2. Once you have reached the appropriate value, stop pressing the key. The display automatically returns to the Run mode (6 secs).



3 seconds Indicates that the device is now in units mode.



The current option is shown (i.e. m)




Press "20" for option 2 (i.e. ft)



6 seconds Option 2 has now been selected.


Troubleshooting

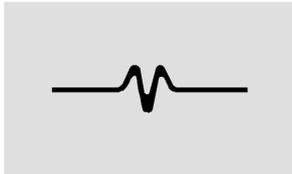

The echo is not reliable and the LU180 is waiting for a valid echo before updating the measurement.

Probable causes are:

- Material or object in contact with sensor face
- The LU180 is too close to the fill point
- The LU180 is not perpendicular to the liquid surface
- Change in level too fast
- Measurement out of range
- Foam on liquid surface
- High level of vibration in the mounting structure
- Level inside the blanking zone

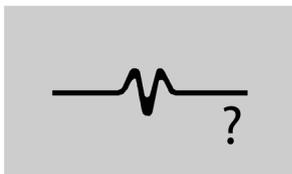

The 'Waiting' period has expired. Investigate the probable causes listed above.

Refer to Speed of response (Page 27) or Fail-safe timer (Page 29) for duration of 'Waiting' periods.

Technical specifications

Note

Siemens makes every attempt to ensure the accuracy of these specifications but reserves the right to change them at any time.

8.1 Power

12 to 30 V DC (at terminal blocks), 0.1 A surge	
loop current	4 to 20 mA max

8.2 Performance

Range	0.25 to 5 m (0.8 to 16.4 ft) (liquids only)	
Beam angle	12° at -3 dB boundary	
Temperature compensation	built-in to compensate over the operating range	

8.3 Interface

Display	<ul style="list-style-type: none"> liquid crystal three 9 mm (0.35") digits for reading of distance between sensor face and material multi-segment graphic for commissioning and troubleshooting
Programming	2 tactile buttons
Memory	non-volatile EEPROM, no battery required

8.4 Outputs

mA output		
	Range	4 to 20 mA
	Span	proportional or inversely proportional
	Accuracy	0.25% of full scale at reference conditions
	Resolution	3 mm (0.125")
	Loading	600 ohms max loop load at 24 V DC supply
	Cable	twisted pair, AWG 28 to 16 (0.34 to 1.5 mm) or equivalent

8.5 Construction

Combined sensor and electronics package		
Sensor housing	material	PVDF
	mounting	threaded <ul style="list-style-type: none"> • 2" NPT ((Taper), ANSI/ASME B1.20.1) • R 2" ((BSPT), EN 10226) • G 2" ((BSPP), EN ISO 228-1) • 4" Sanitary
	optional flange adapter	<ul style="list-style-type: none"> • 2" NPT - 7ML1830-1BT • 2" BSPT - 7ML1830-1BU
Enclosure material	PBT	
Connection	<ul style="list-style-type: none"> • 1 x M20 or 1/2" NPT conduit entry • 2 screw terminal block for 2.5 mm² • (14 ga) solid wire / 1.5 mm² (16 ga) stranded wire max 	
Enclosure rating	Type 6/NEMA 6/IP68 (2 meters for 24 hours)	
Weight	1.3 kg	

8.6 Operating conditions

Location	indoor / outdoor
Ambient temperature	continuous -40 to +60 °C (-40 to +140 °F) -20 °C (-5 °F) if metal mounting
Relative humidity	suitable for outdoor (Type 6/NEMA 6/IP68 (2 meters for 24 hours))
Installation category	I
Pollution degree	4

8.7 Approvals

General purpose		FM, cCSAus, CE, UKCA, RCM, KC	
Hazardous	Intrinsically safe	Europe	ATEX II 1G Ex ia IIC T4 Ga
		UK	UKEX II 1G Ex ia IIC T4 Ga
		International	Ex ia IIC T4 Ga IECEX SIR 15.0118X
		US/Canada	FM/CSA Class I, II, III, Div. 1, Groups A, B, C, D, E, F, G T4

Product documentation and Support

A.1 Product documentation

Process instrumentation product documentation is available in the following formats:

- Certificates (<http://www.siemens.com/processinstrumentation/certificates>)
- Downloads (firmware, EDDs, software) (<http://www.siemens.com/processinstrumentation/downloads>)
- Catalog and catalog sheets (<http://www.siemens.com/processinstrumentation/catalogs>)
- Manuals (<http://www.siemens.com/processinstrumentation/documentation>)

You have the option to show, open, save, or configure the manual.

- "Display": Open the manual in HTML5 format
- "Configure": Register and configure the documentation specific to your plant
- "Download": Open or save the manual in PDF format
- "Download as html5, only PC": Open or save the manual in the HTML5 view on your PC

You can also find manuals with the Mobile app at Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/sc/2067>). Download the app to your mobile device and scan the device QR code.

Product documentation by serial number

Using the PIA Life Cycle Portal, you can access the serial number-specific product information including technical specifications, spare parts, calibration data, or factory certificates.

Entering a serial number

1. Open the PIA Life Cycle Portal (<https://www.pia-portal.automation.siemens.com>).
2. Select the desired language.
3. Enter the serial number of your device. The product documentation relevant for your device is displayed and can be downloaded.

To display factory certificates, if available, log in to the PIA Life Cycle Portal using your login or register.

Scanning a QR code

1. Scan the QR code on your device with a mobile device.
2. Click "PIA Portal".

To display factory certificates, if available, log in to the PIA Life Cycle Portal using your login or register.

A.2 Technical support

Technical support

If this documentation does not completely answer your technical questions, you can enter a Support Request (<http://www.siemens.com/automation/support-request>).

For help creating a support request, view this video here (www.siemens.com/opensr).

Additional information on our technical support can be found at Technical Support (<http://www.siemens.com/automation/csi/service>).

Service & support on the Internet

In addition to our technical support, Siemens offers comprehensive online services at Service & Support (<http://www.siemens.com/automation/serviceandsupport>).

Contact

If you have further questions about the device, contact your local Siemens representative at Personal Contact (<http://www.automation.siemens.com/partner>).

To find the contact for your product, go to "all products and branches" and select "Products & Services > Industrial automation > Process instrumentation".

Contact address for business unit:

Siemens AG

Digital Industries


Process Automation

Östliche Rheinbrückenstr. 50

76187 Karlsruhe, Germany

Appendix

B.1 Measurement interval

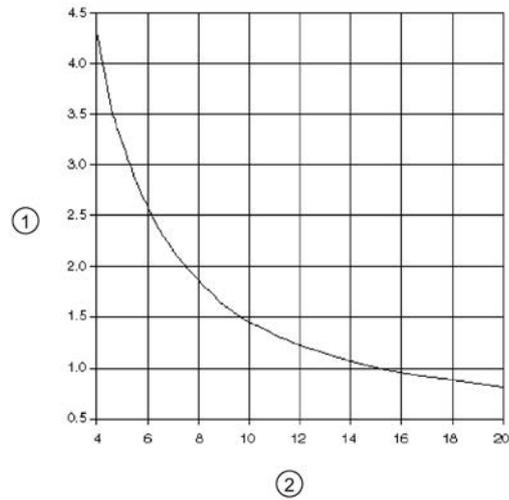

- ① Interval (in seconds)
- ② mA loop current

Index

C

Catalog
 catalog sheets, 35
Certificates, 35
Customer Support, (Refer to Technical support)

D

Downloads, 35

H

Hotline, (Refer to Support request)

M

Manuals, 35

S

Service, 36
Service and support
 Internet, 36
Support, 36
Support request, 36

T

Technical support, 36
 partner, 36
 personal contact, 36